

SPOT X

FEATURES

MESSAGES

Used to Start, Cancel and Extend Activities. Also used to raise an Alarm by 999 message.

Starting an Activity:

1. Go to Messages
2. Select Predefined
3. Select Activity Length
4. In Contacts, select Log Activity Line
5. Send the Message

Use 'Create Message' to enter your own activity description

Extend an Activity:

1. Go to Messages
2. Select Predefined
3. Select Extend
4. In Contacts, select Log Activity Line
5. Send the Message

Cancel an Activity:

1. Go to Messages
2. Select Predefined
3. Select Cancel
4. In Contacts, select Log Activity Line
5. Send the Message

Raise an Alarm:

1. Go to Messages
2. Select Predefined
3. Select 999
4. In Contacts, select Log Activity Line
5. Send the Message

SOS ALARM

Method 1. Remove the flap and press and hold the SOS button to raise an alarm to the ARC.

This will put the device into S.O.S mode and update the devices position every 2.5 minutes until cancelled. **Do Not Text GEOS.**

Once the alarm has been dealt with, Cancel S.O.S to leave the S.O.S mode.

Method 2. Select 999 in Predefined messages and send to the Log Activity line.

CREATE MESSAGE

Can be used to send custom activity descriptions to the Log Activity Line, email contacts or SMS contacts.

Starting an Activity format: Activity, Duration (in minutes), Description e.g. Fence checking

Extend an Activity format: Extend, Duration (in minutes), Description e.g. Due to longer route

BATTERY INDICATOR

If blinking Green, power is above 20%

If blinking Red, power is below 20%

STATUS BAR

Shows information for the device.

RETURN

TOGGLE AND SELECT

AUTOMATIC POSITION

Press and hold the Automatic Position button until the footprint appears in the top status bar.

The device will then attempt to send a position every 10 minutes for the next 24 Hours.

Press and hold to cancel the Automatic Position function.

STATUS BAR ICONS

BATTERY

- Battery Strength
- Low Battery
- Battery Charging

GPS SIGNAL (Does not show all the time)

- GPS Signal Available
- GPS Signal Unavailable

DEVICE

- Sync Required

MESSAGES

- Sending a Message
- New Received Messages
- Fetching New Messages
- Pending Queued Messages

MODES

- S.O.S. Active
- Tracking Active
- Suspended Tracking

SWITCH ON/OFF BACKLIGHT ON/OFF

Press the power button for on; press and hold for off

Toggle backlight by pressing power button

